

SOCOREX[®] REPEATER PIPETTE STEPPER[™] 416 **Quick Guide**

Volume range and Ecostep[™] syringe selection

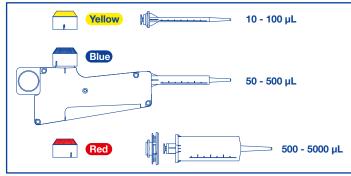


Select adequate syringe and corresponding setting knob.

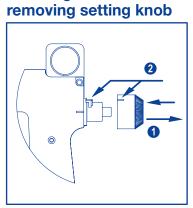

Inserting and

Pull to remove 1. Insert guide into slot, push until click 2.

Inserting and removing syringe

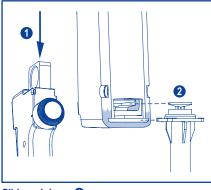


Slide rod down 1. Insert syringe into recess 2. **Adapter for** red syringe




Screw adapter on top of syringe first. Adapter can be re-used. Do not throw away.

Volume setting

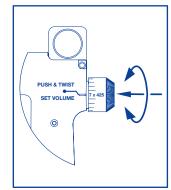


Press knob and simultaneously rotate until volume scale and setting mark are even.

Filling and dispensing

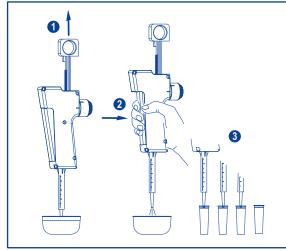


Slowly pull rod upwards to aspirate liquid (). Check absence of air bubble in liquid column. Press trigger in full, discard first shot 2. Depress trigger until stop and release completely for each aliquot 3.

Automatic stop

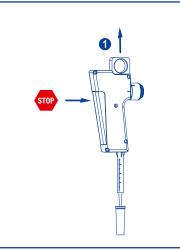

Trigger self-locking when remaining liquid is insufficient. Pull rod upwards to aspirate liquid 1.

End of dosing

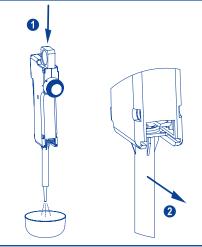


Push rod down to empty remaining liquid (). Slide syringe out of recess 2.



.416GUIDE.E - A0720



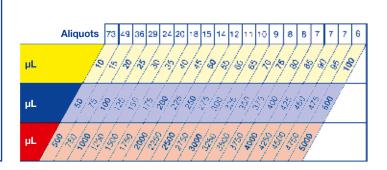



Socorex Isba SA - Switzerland - www.socorex.com Tel. +41 (0)21 651 6000 - socorex@socorex.com